

Gefen

®

DVI RS-232 Over Fiber

EXT-DVI-FO-141

User Manual



www.gefen.com

ASKING FOR ASSISTANCE

Technical Support:

Telephone (818) 772-9100
(800) 545-6900

Fax (818) 772-9120

Technical Support Hours:

8:00 AM to 5:00 PM Monday thru Friday PST

Write To:

Gefen Inc.
c/o Customer Service
20600 Nordhoff St
Chatsworth, CA 91311

www.gefen.com
support@gefen.com

Notice

Gefen Inc. reserves the right to make changes in the hardware, packaging and any accompanying documentation without prior written notice.

DVI RS-232 over Fiber™ is a trademark of Gefen Inc.

© 2010 Gefen Inc., All Rights Reserved

All trademarks are the property of their respective owners.

Rev A3

CONTENTS

- 1 Introduction**
- 2 Operation Notes**
- 3 Features**
- 4 Sender Panel Layout**
- 5 Sender Panel Descriptions**
- 6 Receiver Panel Layout**
- 7 Receiver Panel Descriptions**
- 8 Connecting And Operating The DVI RS-232 Over Fiber**
- 9 Network Cable Wiring Diagram**
- 10 Specifications**
- 11 Warranty**

INTRODUCTION

Congratulations on your purchase of the DVI RS-232 over Fiber. Your complete satisfaction is very important to us.

Gefen

Gefen delivers innovative, progressive computer and electronics add-on solutions that harness integration, extension, distribution and conversion technologies. Gefen's reliable, plug-and-play products supplement cross-platform computer systems, professional audio/video environments and HDTV systems of all sizes with hard-working solutions that are easy to implement and simple to operate.

The Gefen DVI RS-232 over Fiber

The Gefen DVI RS232 over Fiber is a perfect solution for extending and managing control systems, touchscreen or digital signage applications at great distances. The DVI RS232 sends DVI, RS232, and IR signals up to 1000 feet using a single CAT5 and single SC fiber. RS232 and IR signals are transmitted over a single CAT5 cable while the DVI signal is transmitted over a single SC fiber.

How It Works

The DVI RS232 over Fiber system consists of a Sender and a Receiver unit. The Sender connects to the computer's DVI-compliant video card output, and RS-232 port. The DVI RS232 over fiber Receiver connects to the remote display and RS232 and IR devices. One strand of SC fiber optic cable and a CAT5 cable connects the Sender and Receiver together.

OPERATION NOTES

READ THESE NOTES BEFORE INSTALLING OR OPERATING THE DVI RS-232 OVER FIBER

- Use one SC terminated multi-mode fiber optic cable and one industry standard CAT-5, CAT-5e or CAT-6 cables to operate the DVI RS-232 over Fiber. Gefen recommends CAT-6 cabling for maximum performance.
- For 1080p video, maximum extension is 1000 feet (330 meters).
- IR repeater functionality is only from the receiving unit to the sending unit. IR data cannot be transmitted from the sending unit to the receiving unit.

FEATURES

Features


- Extends any DVI and RS-232 compliant device up to 1000 feet from the computer
- Perfect for digital signage applications
- Video is transmitted digitally over fiber optic cable for zero signal loss
- Supports resolutions up to 1080p, 2K, and 1920 x 1200
- HDCP Compliant.
- Supports DDWG standards for DVI-compliant monitors

Package Includes


- (1) DVI RS232 Sender
- (1) DVI RS232 Receiver
- (1) 6 ft. Dual Link DVI Cable (M-M)
- (1) 6 ft. RS-232 DB9 Cable (M-F)
- (2) 5V DC Universal Power Supply with Locking Connector
- (1) User's Manual

SENDER PANEL LAYOUT

Front Panel

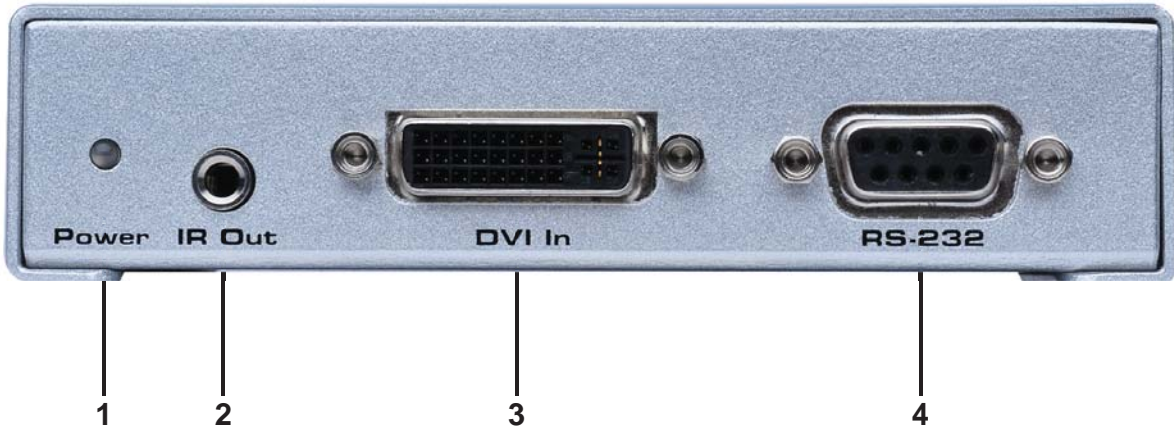

Back Panel

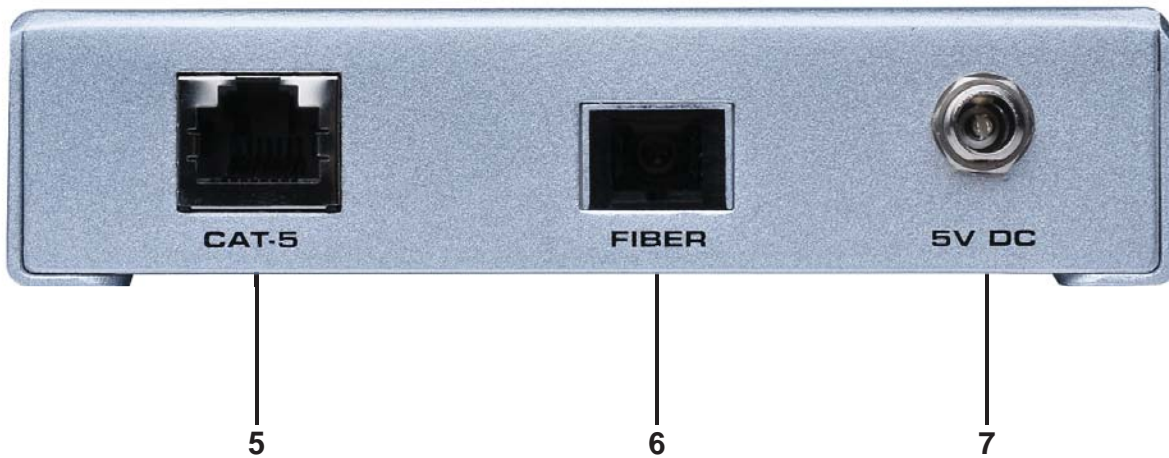

SENDER PANEL DESCRIPTIONS

1 LED Power Indicator

This LED will become active once the included 5V DC power supply is properly connected between the sender and an open wall power socket.

2 IR Out (Blaster)

An optional IR transmitter/blaster (EXT-2IREMIT) connects to this output port. The IR blaster's IR emitter will need to be placed on or near the IR receiver of a device for proper relaying of commands from the receiver.

3 DVI-D Input

This receptacle will accept a DVI Single-Link source device.

4 RS-232 Serial Communications Input

This port is capable of 2-way serial communication between RS-232 devices connected to the sender and receiver. This port can be connected to a computer's serial communications port for interaction with a RS-232 serial communications device connected to the receiver.

5 RJ-45 Link Connector

This port is used to connect the sending and receiving units together for data traffic. Use a CAT-5, CAT-5e or CAT-6 cable. When field terminating cable please adhere to the TIA/EIA-568-B specification (page 9).

6 Fiber Optic Connector (Multi-Mode SC Type)


This connector accepts 1 strand of SC terminated fiber optic cable that will link the sending and receiving unit together. The DVI RS-232 over Fiber system will only accept multi-mode fiber optic cabling.

7 Locking 5V DC Power Input


Connect the included 5V DC power supply to this input. The Power LED will become active when the 5V DC power supply has been properly connected to the unit and an open wall power socket. This receptacle features a locking connector for a secure connection.

RECEIVER PANEL LAYOUT

Front Panel

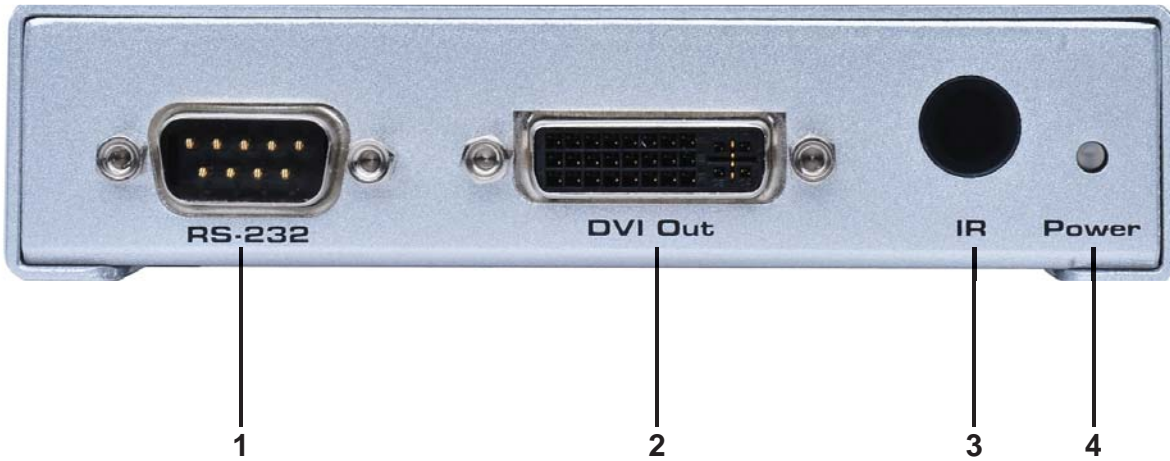

Back Panel

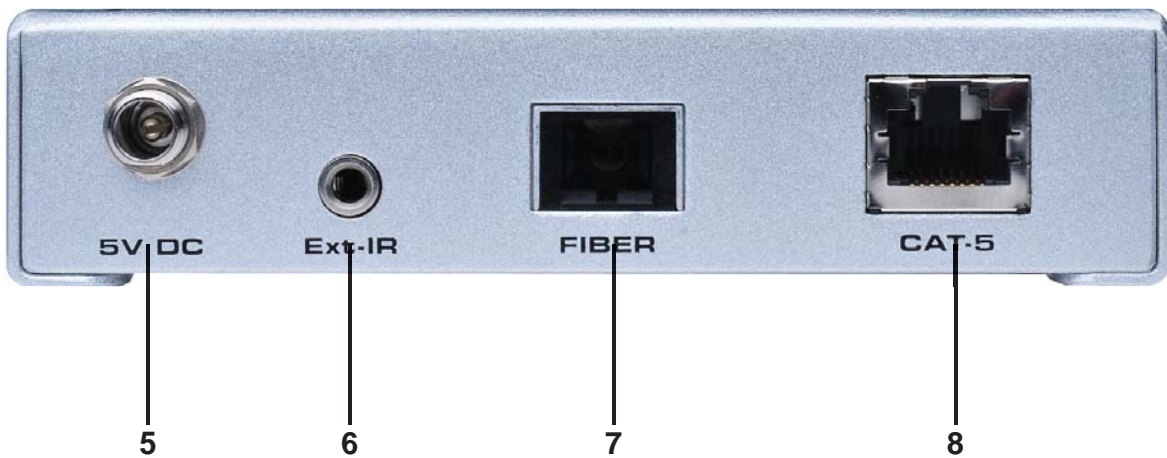

RECEIVER PANEL DESCRIPTIONS

- 1 *RS-232 Serial Communications Input***

This port is capable of 2-way serial communication between RS-232 devices connected to the sender and receiver. This port can be connected to a computer's serial communications port for interaction with a RS-232 serial communications device connected to the receiver.
- 2 *DVI-D Output***

This receptacle will accept a DVI capable Single-Link output device.
- 3 *Infrared (IR) Window***

This sensor captures IR commands from a remote control, then relays the IR commands from the receiving unit to the sending unit for output to a IR transmitter (blaster) on a IR controllable device at the A/V source location.
- 4 *LED Power Indicator***

This LED will become active once the included 5V DC power supply is properly connected between the receiver and an open wall power socket.
- 5 *Locking 5V DC Power Input***

Connect the included 5V DC power supply to this input. The Power LED will become active when the 5V DC power supply has been properly connected to the unit and an open wall power socket. This receptacle features a locking connector that withstands tugs or tension on the cable, keeping the unit powered during such events.
- 6 *Infrared (IR) Receiver Extender Port***

This port will accept the optional 6-foot IR extension cable (Gefen part# EXT-RMT-EXTIR). This is useful for installations where the IR Window on the front panel (Item 2 here) is not in line-of-sight with the IR remote control. An example of this situation is when the Receiver is tucked away behind furniture or is located in an equipment rack and only the IR Extender sensor shows.
- 7 *Fiber Optic Connector (Multi-Mode SC Type)***

This connector accepts 1 strand of SC terminated fiber optic cable that will link the sending and receiving unit together. The DVI RS-232 over Fiber system will only accept multi-mode fiber optic cabling.
- 8 *RJ-45 Link Connector***

This port is used to connect the sending and receiving units together for data transmission. Use a CAT-5, CAT-5e or CAT-6 cable. When field terminating cable please adhere to the TIA/EIA-568-B specification (page 9).

CONNECTING AND OPERATING THE DVI RS-232 OVER FIBER


How to Connect the DVI RS-232 over Fiber

1. Connect the Single-Link DVI-D source to the DVI RS-232 over Fiber sending unit's DVI input port using the supplied DVI cable.
2. Connect the RS-232 source to the DVI RS-232 over Fiber sending unit's RS-232 input port using the supplied DB-9 serial cable.
3. For IR repeater functionality, please connect the IR emitter's mini-jack (sold separately, part # EXT-2IREMIT) into the DVI RS-232 over Fiber sending unit. Place the IR emitter directly on or above the IR receiver of the desired source device.
4. Connect the DVI RS-232 over Fiber sending and receiving units together using one user supplied SC terminated multi-mode fiber optic cable and one CAT-5, CAT-5e or CAT-6 cable.

NOTE: If field terminating network cable, please adhere to the TIA/EIA568B specification. Please see page 9 for more information.


5. Connect the DVI-D capable output device to the DVI output port of the DVI RS-232 over Fiber receiving unit using a user supplied DVI-D cable.
6. Connect the RS-232 device to the RS-232 output port of the DVI RS-232 over Fiber receiving unit using a user supplied DB-9 serial cable.
7. Plug the included 5V DC power supplies into both the DVI RS-232 over Fiber sending and receiving units.
8. Power on the display first and the source second.

NETWORK CABLE WIRING DIAGRAM

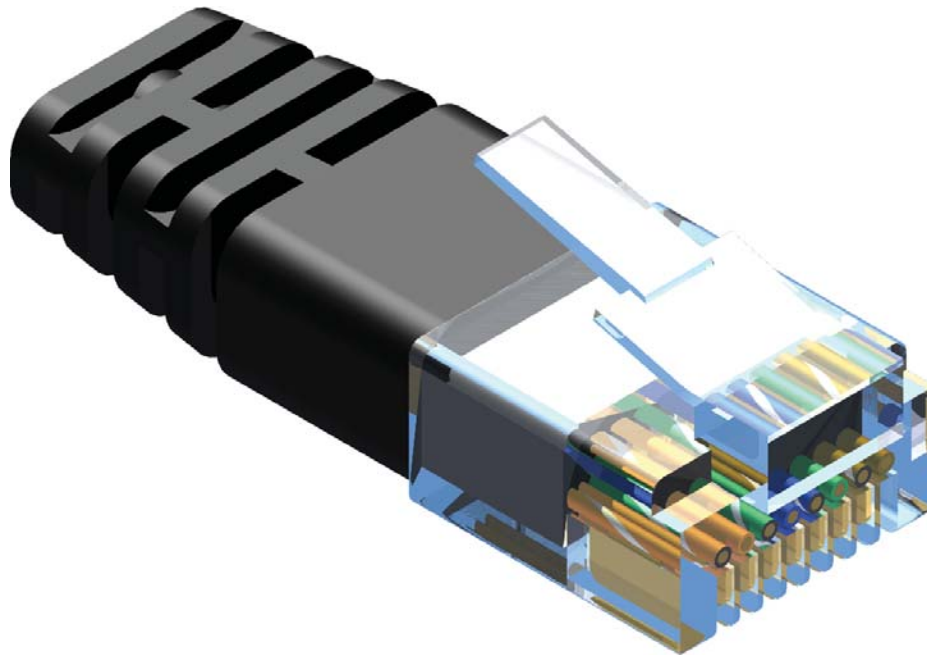

Gefen has specifically engineered their products to work with the TIA/EIA-568-B specification. Please adhere to the table below when field terminating cable for use with Gefen products. Failure to do so may produce unexpected results and reduced performance.

Pin	Color
1	Orange / White
2	Orange
3	Green / White
4	Blue
5	Blue / White
6	Green
7	Brown / White
8	Brown

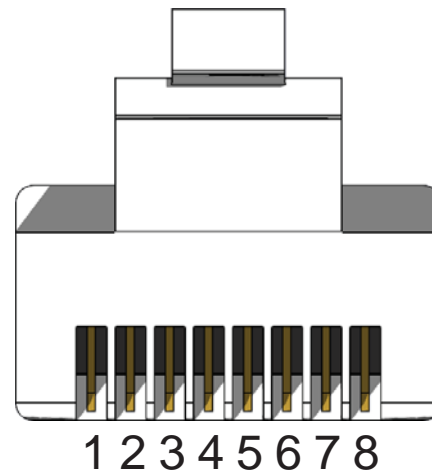

CAT-5, CAT-5e, and CAT-6 cabling comes in stranded and solid core types. Gefen recommends using solid core cabling. CAT-6 cable is also recommended for best results.

Each cable run must be one continuous run from one end to the other. No splices or use of punch down blocks.

SPECIFICATIONS

Video Amplifier Bandwidth	165 MHz
Input Video Signal	1.2 Volts p-p
Input DDC Signal	5 Volts p-p (TTL)
Single Link Range	1080p/1920 x 1200
DVI I/O Connectors	DVI-I (29 pin) female (digital only)
RS232 Input Connector	DB-9 female
RS232 Output Connector	DB-9 male
Power Supply	5V DC
Power Consumption	10 Watts (max each P/S)
Link Connector	single RJ-45
Video Link Connector	SC
Serial Communication Standard:	RS-232
Dimensions	4.6" W x 1.1" H x 3.3" D
Shipping Weight	5 lbs.
HDCP Compliant	

WARRANTY

Gefen warrants the equipment it manufactures to be free from defects in material and workmanship.

If equipment fails because of such defects and Gefen is notified within two (2) years from the date of shipment, Gefen will, at its option, repair or replace the equipment, provided that the equipment has not been subjected to mechanical, electrical, or other abuse or modifications. Equipment that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for ninety (90) days from the day of reshipment to the Buyer.

This warranty is in lieu of all other warranties expressed or implied, including without limitation, any implied warranty or merchantability or fitness for any particular purpose, all of which are expressly disclaimed.

1. Proof of sale may be required in order to claim warranty.
2. Customers outside the US are responsible for shipping charges to and from Gefen.
3. Copper cables are limited to a 30 day warranty and cables must be in their original condition.

The information in this manual has been carefully checked and is believed to be accurate. However, Gefen assumes no responsibility for any inaccuracies that may be contained in this manual. In no event will Gefen be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages. The technical information contained herein regarding the features and specifications is subject to change without notice.

For the latest warranty coverage information, please visit Gefen's Warranty web page at <http://www.gefen.com/kvm/aboutus/warranty.jsp>

PRODUCT REGISTRATION

**Please register your product online by visiting Gefen's web site at
<http://www.gefen.com/kvm/Registry/Registration.jsp>**

Rev A3



20600 Nordhoff St., Chatsworth CA 91311
1-800-545-6900 818-772-9100 fax: 818-772-9120
www.gefen.com support@gefen.com

